Klein metall®

Transportschutzsysteme

Product name ROADMASTER DELUXE

Product designation Universal luggage and dog guard

Parts No. 10001413

Mounting to the headrest bars

Usability protection of passengers during transport of cargo

Type and design anodised aluminium profiles, powder-coated steel, stainless steel

Dimensions height: 25 cm, width: 95 to 145 cm (telescopic bars)


insions height. 25 cm, whath. 55 to 145 cm (ten

Weight 2 kg

kleinmetall GmbH Hainstraße 52 63526 Erlensee Telefon 06183.91120-0 Fax 06183.72152


Please read these instructions carefully and store them in a safe place. Whenever the guard is used, make sure it is correctly mounted!

E-Mail info@kleinmetall.de www.kleinmetall.de

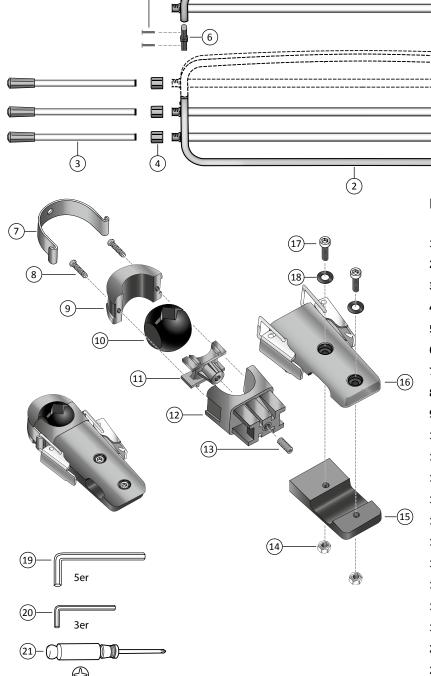



Partlist Frame bracket ______ 1x Lower frame part______ 1x Telescopic bar ______ 6x Fixing sleeve_____ 6x Phillips screw "small" ______ 4x Angle bracket ______ 2x 6. U-clamp ______ 2x Phillips screw "big" _____ 4x Clamp shell____ 10. Clamping ball____ _____ 2x 11. Pressure shell 12. Bearing element ______ 2x 13. Headless screw M6 ______ 2x 14. Hexagon nut M6 ______ 4x 15. Bearing segment with clamping bracket ____ 2x 16. Bearing segment without clamping bracket _ 2x 17. Allen screw M6 ______ 4x 18. Washer 4x 19. Allen key "big"______ 1x 20. Allen key "small" ______ 1x 21. Phillips screwdriver ______ 1x




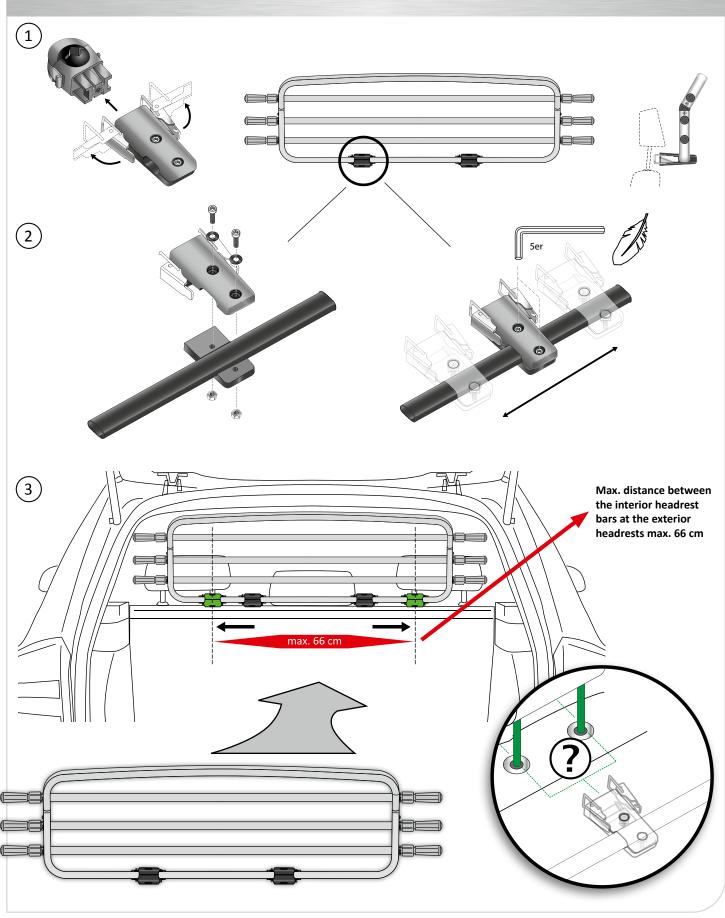




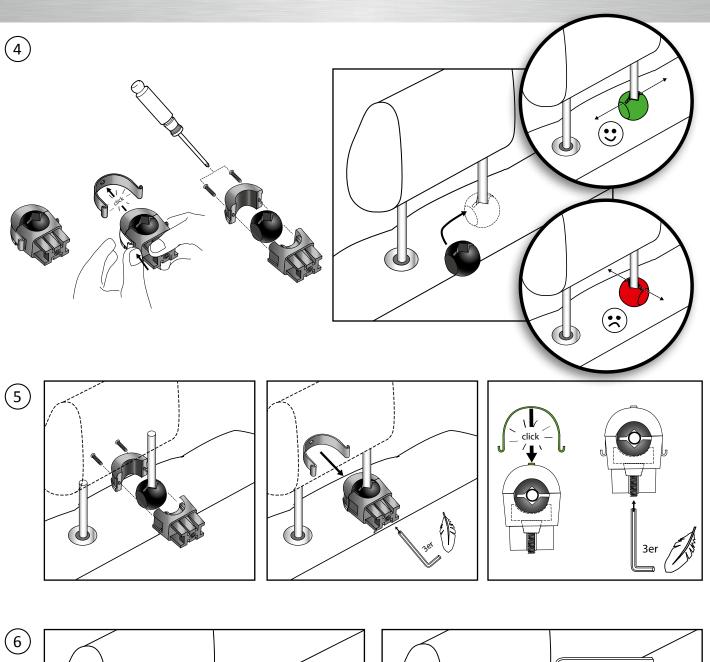

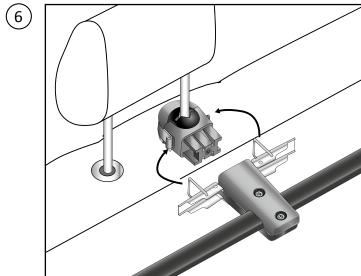


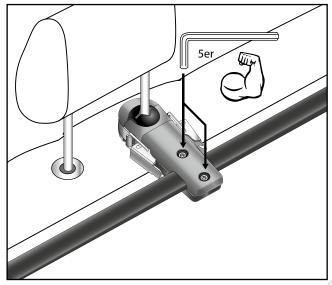



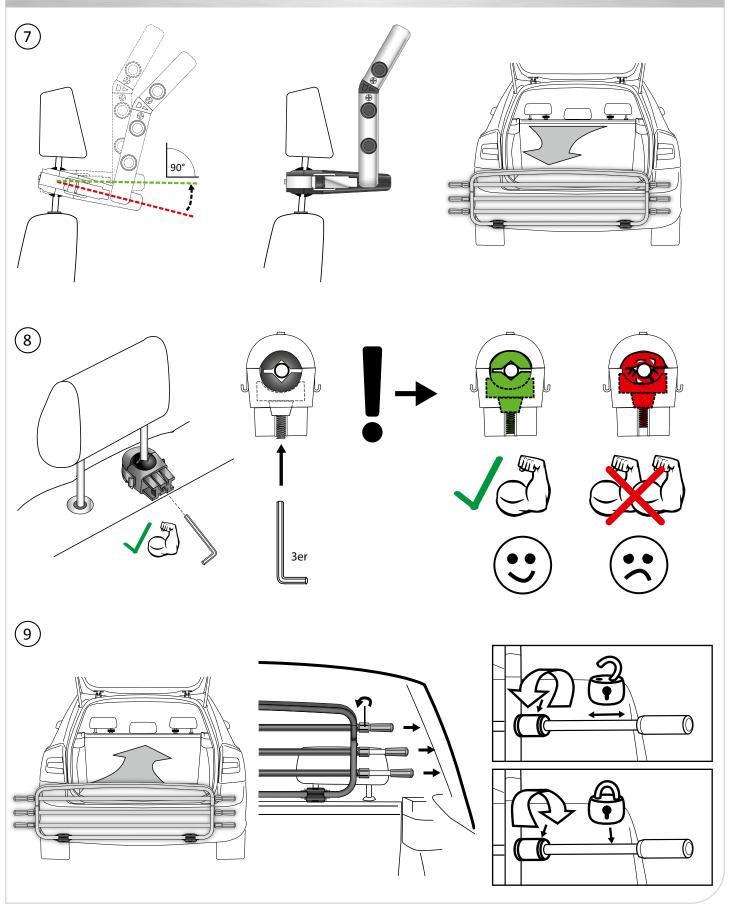



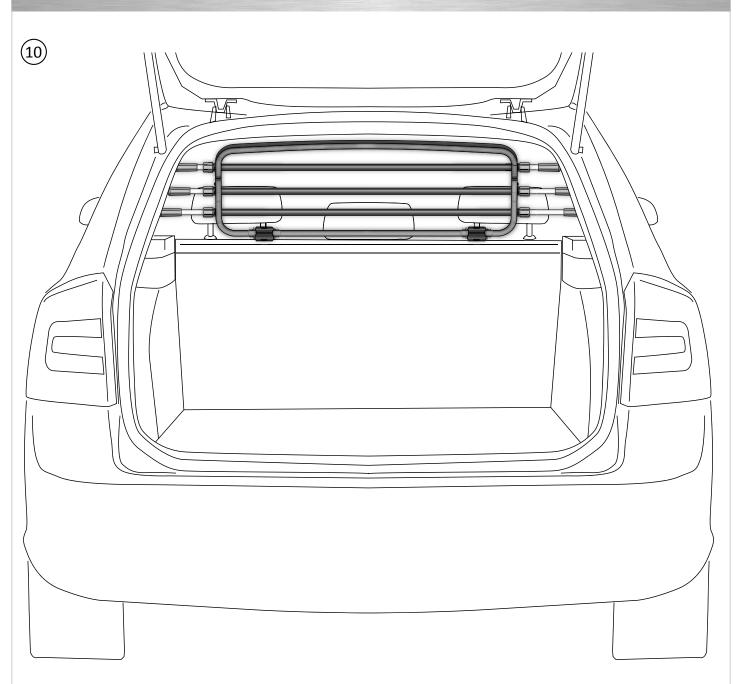

General Notes:

Make sure that the guard is centrally positioned in the vehicle and that all the mounting parts are fixed tight. Take care that the headrests are fixed properly. Check that the backrest has engaged before driving. In some vehicles it is no longer possible to install the roll cover together with the dog guard. If the grid is not needed, it can be easily removed from the headrest bearing elements by loosening the lateral clamping bracket (quick release). Max. distance between the interior headrest bars at the exterior headrests max. 66 cm.

Safety instructions:

Always secure heavy load with additional tensioning straps. Before travelling, check all the mounting parts for tight fit and damage. The transport of people behind the guard is prohibited. Check all screw fittings from time to time and retighten if necessary. Adjust all the seats where the guard is mounted to the same inclination angle so that the grid does not twist. Never leave pets alone and unattended in the car.

Cleaning instructions:

Use neutral soap lye to clean the guard and all the mounting parts especially from dog saliva and dog hair from time to time.

Maintenance instructions:

Carry out visual inspections on the guard in regular intervals and replace damaged parts immediately if necessary.

Edition: dö. 06/2017 Page 5