


INSTALLATION INSTRUCTIONS

Product name COVERALL DELUXE
Product type Car boot protective tarpaulin
Item No. 50555010
Attachment To the headrests, side windows and interior lining
Use In big estate cars, SUVs and vans
Version and features Universal size
Weight 2.2 kg
Dimensions Width 120 cm, depth 110 cm, height 60 cm


kleinmetall GmbH
Hainstraße 52
63526 Erlensee
Telefon 06183.91120-0
Fax 06183.72152
E-Mail info@kleinmetall.de
www.kleinmetall.de

! Please read these instructions carefully and keep them in a safe place.
! Make sure the tarpaulin is properly secured before operating your vehicle!

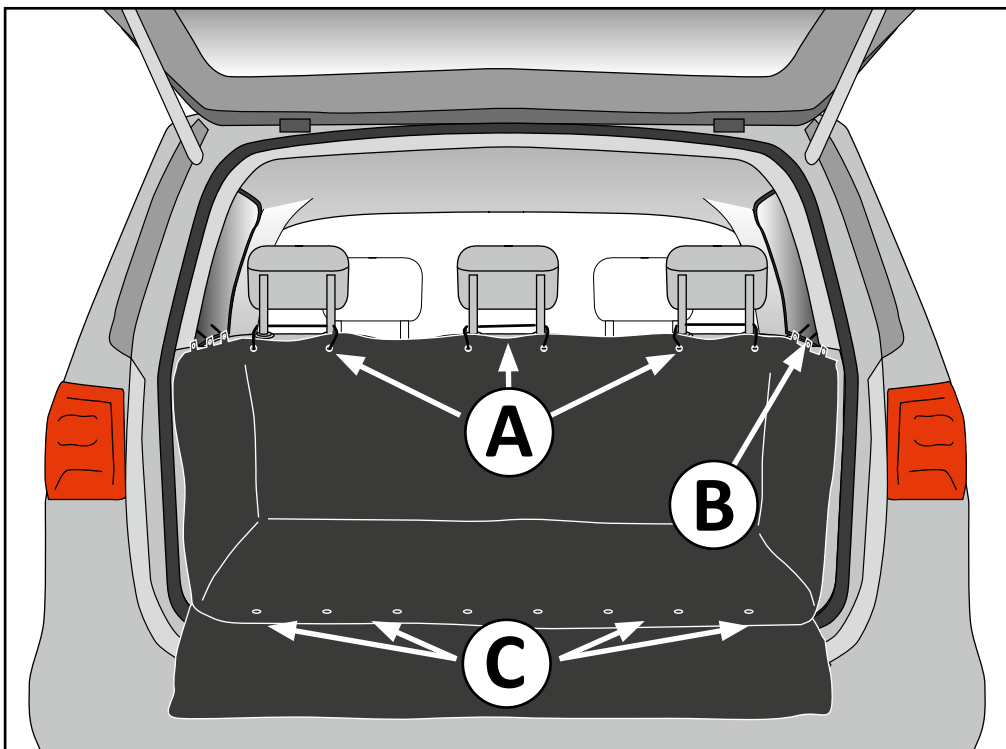

Content:

10 x 3M™ adhesive pads
(2 replacements)



10 x fixing cords with
longitudinal adjustment
(2 replacements)





10 x Snap fastener sockets



10 x screws







A

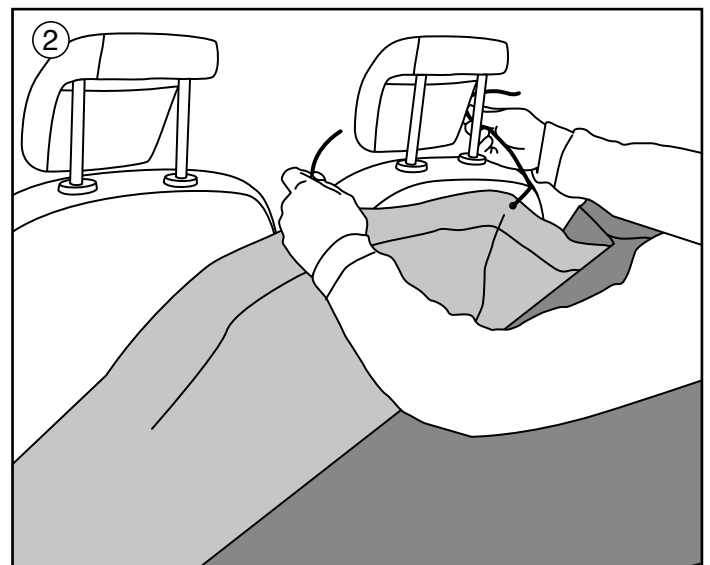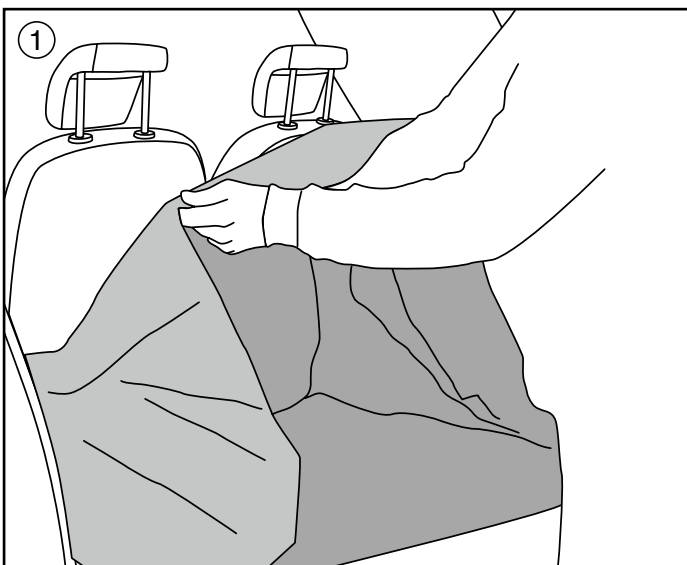





Continued on next page!

B

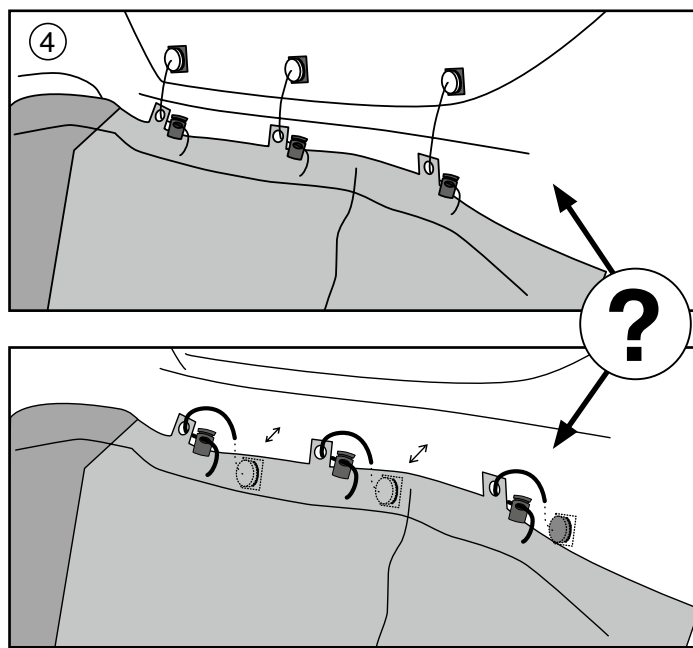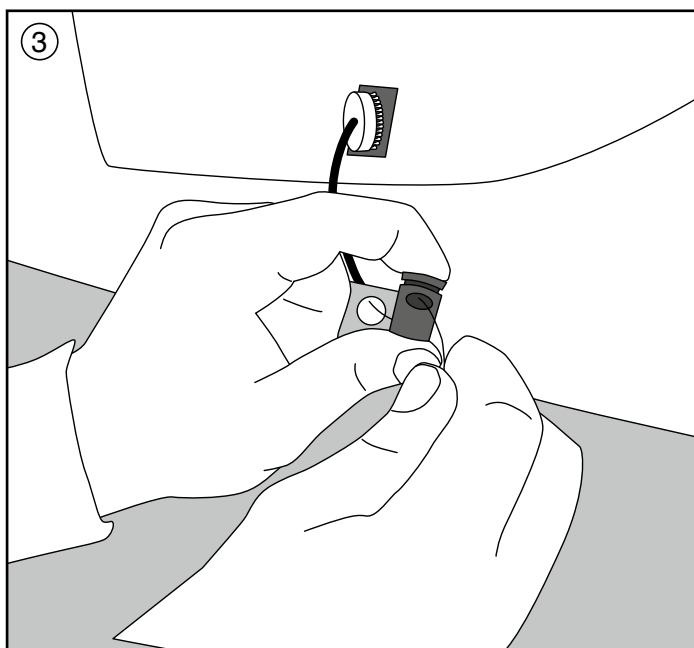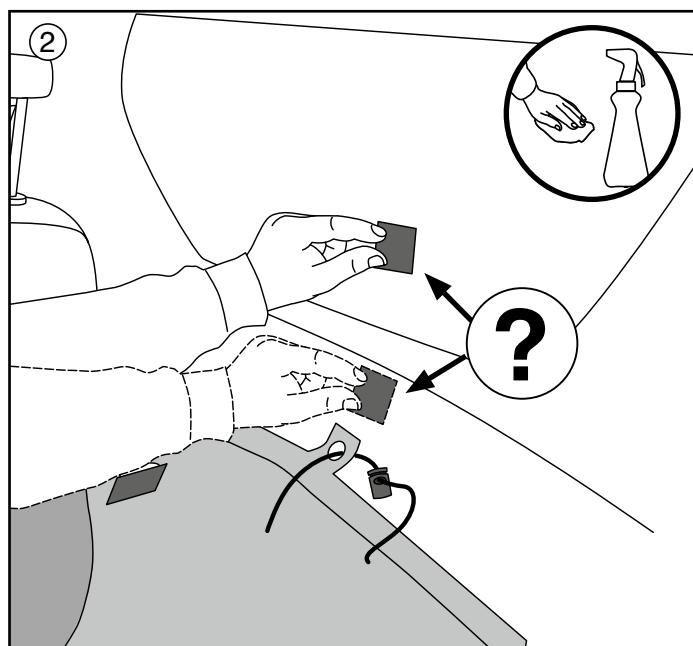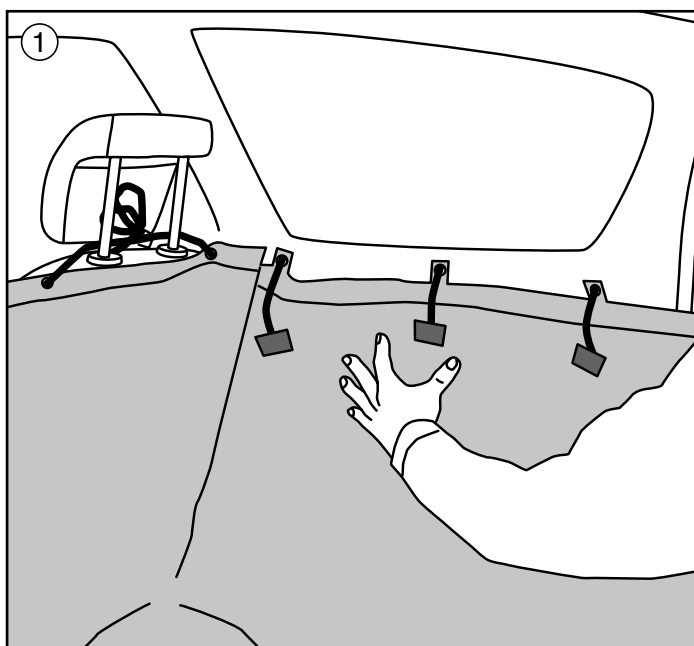

Continued on next page!

C

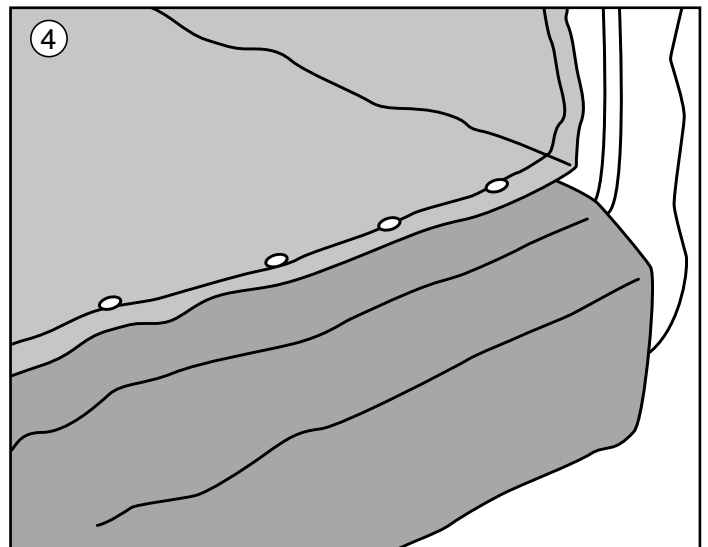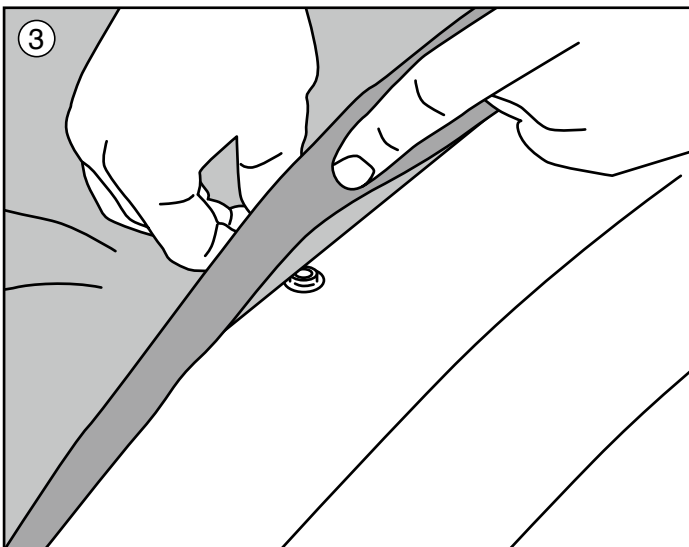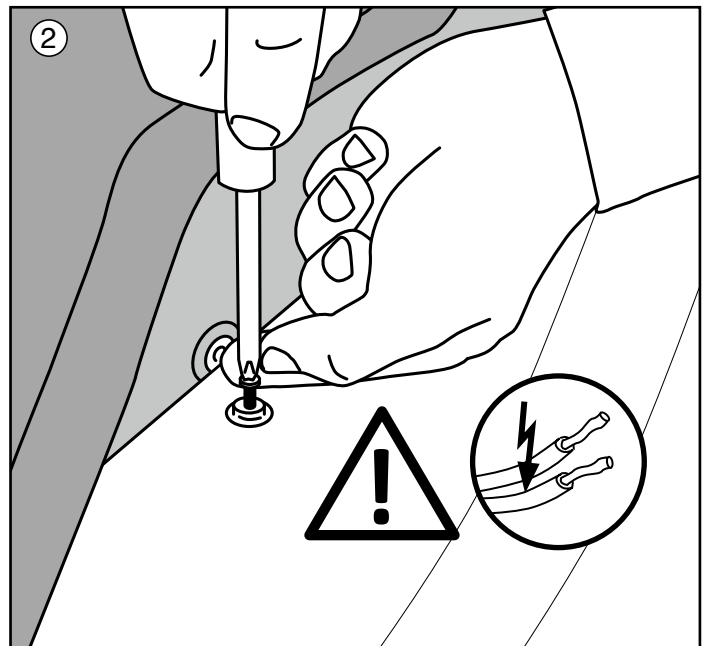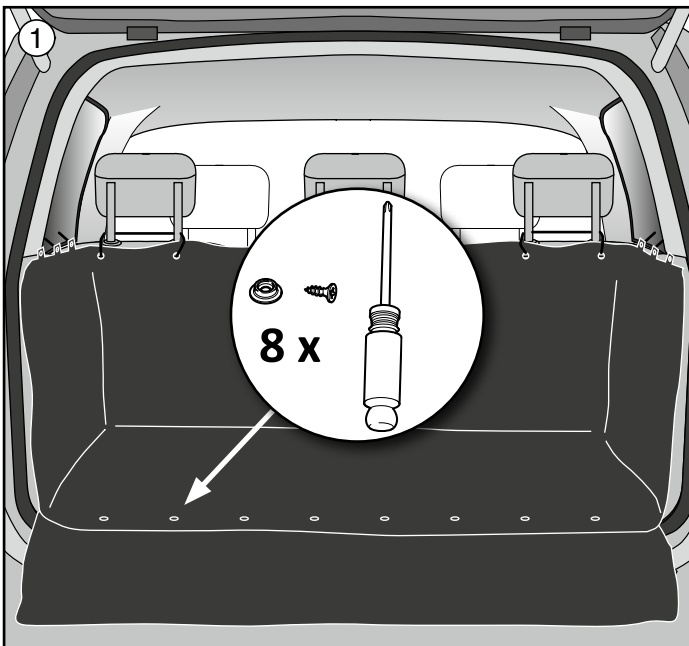

Notes:

Apply adhesive pads only on non-fat and silicone-free surfaces, preferably on the rear side windows. Make sure that the areas where heating elements or antennas are located on the side windows are not touched.
Do not use on tint film!

When screwing the snap fastener sockets make sure that the screws do not damage any cables or hoses behind/included in the lining.

Occasionally clean all the installation parts and the tarpaulin with neutral soapy water and remove dog saliva and hair. Regularly inspect the tarpaulin for damages and replace if necessary!